



Wifo Farm Equipment Ltd.  
4181 Boomer Line  
St Clements, Ontario, N0B 2M0  
**Phone:** 519-699-5658  
**Fax:** 519-699-5655  
**Toll Free:** 1-800-390-4752  
**E-mail:** sales@wifo.ca  
[www.wifo.ca](http://www.wifo.ca)

# PARTS AND OPERATORS MANUAL

## Hydraulic Skid steer Mount Snow Blower



## **Features**

- All rotating points have bearings.
- Complete with hydraulic hoses and quick connectors.

## **Available Models**

WSH48	48" Hydraulic snow blower skidsteer mount 18" fan 12" auger
WSH60	60" Hydraulic snow blower skidsteer mount 26" fan 16" auger
WSH66	66" Hydraulic snow blower skidsteer mount 26" fan 16" auger
WSH72	72" Hydraulic snow blower skidsteer mount 28" fan 20" auger
WSH78	78" Hydraulic Snow Blower Skid steer mount 28" Fan 20" auger
WSH84	84" Hydraulic snow blower skidsteer mount 30" fan 20" auger
WSH96	96" Hydraulic snow blower skidsteer mount 30" fan 20" auger

## **1. INTRODUCTION**

With your purchase of the Wifo Hydraulic Snow Blower you have made the right choice for the clearing your lane and Yard. Through its unique construction it requires minimal maintenance.

Before using your Snow Blower read this manual carefully to familiarize yourself with this machine. Operating unfamiliar machines may lead to accidents.

This Operator's manual has been written to assist you in obtaining the best possible results from your Wifo Snow Blower. Keep this Manual in a safe and dry place so you can always use it as a reference booklet weather it is for looking up parts or contact Info. If any questions should remain, however, you can contact your local dealer who will gladly assist you.

## **2. SAFETY PRECAUTIONS**

seat belt to drive and apply the park brake prior to leaving the seat. Also avoid sudden maneuvers and change of direction.

- Comply with federal and local laws governing highway safety on public roads using the proper lights and a slow moving vehicle sign
- When in use, never stand within operating range of the Snow Blower and never have someone or yourself go under a raised bucket.
- Strictly operate the Snow Blower From your skid steer or tractors driver's seat and make sure you have a good view on your job.
- Make sure the Snow blower can move freely and do not jam any hydraulic hoses.
- **WARNING!** the hydraulic circuit operates under high pressure, make sure that the hydraulic systems of both your Snow blower and Skid steer are depressurized before connecting any hoses between the two.
- Clearly label or tag the hydraulic fittings of the Snow Blower and Skid steer to avoid incorrect connection, which may lead to invert functions such as raising and lowering
- Make sure that your hydraulic hoses do not get jammed during operation and never operate the Snow Blower with a hydraulic hose that has been damaged, regularly check all hydraulic hoses and replace any worn or damaged ones immediately. When replacing hoses, use only replacements compliant to original technical specifications.
- Take all possible precautions to avoid accidents when inspecting the skid steer and snow blower for hydraulic leaks. (such as applying park brakes)
- Remember that liquids under pressure, and especially oil, can penetrate the skin and cause serious injury. Consult a doctor immediately to prevent infection in case of injury.
- Always park on a flat and solid surface for storage.

## **Safety Decals**

• Ensure all safety decals are always on the Snow blower, Safety inspection can not be completed with missing safety labels, in the event of missing safety decals, contact your nearest dealer or Wifo Farm Equipment Toll Free 1-800-390-4752



## 4. MAINTENANCE


Minamal maintenance is required for the Wifo Snow Blower, but the following requirements must be strictly followed.

- A) It is equipped with grease nipples that should be greased regularly.
- B) Tightness of bolts and nuts and the wear on all hydraulic components must be checked periodically. Any worn parts have to be replaced immediately.
- C) A roller chain goes from the shear bolt sprocket to the auger under the guard. This chain should be oiled annually with any type of oil. The chain should be checked or tightness it should have ¼" to ½" slack


In case you have to replace a part, make sure that it is a genuine Wifo part which can be obtained through your dealer. (Visit our website to find a Dealer or contact Wifo Farm Equipment Toll Free 1-800-390-4752)

### Shear pin Location

There is only one shear pin on the hydraulic blowers when your standing behind the blower it is on the LH side under the guard

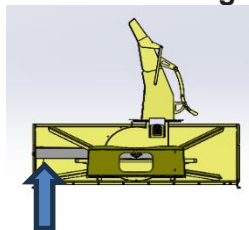

Shear pin Location

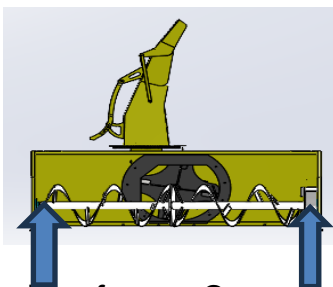

Bearing Location on each side of auger Grease annually with 2 pumps each